


QUICK GUIDE - EE600


(Full User's Guide at www.epluse.com/EE600)

Installation

Pressure Connection

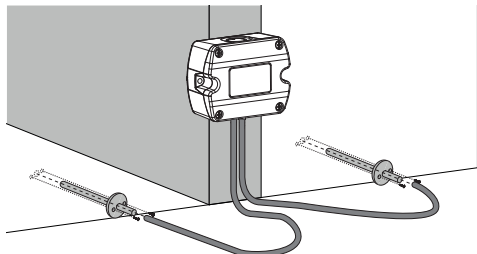

Installation Examples

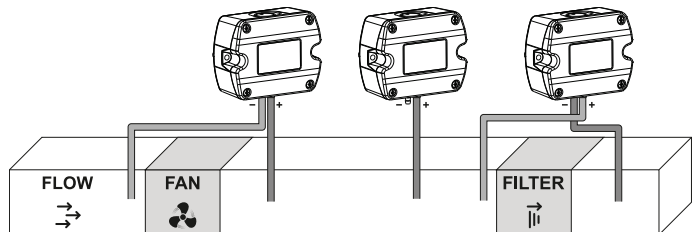


Use a Ø 7.5 mm drill for installing the pressure connection nipples into the duct.

Setup with DIP Switches

S1	S2	MR ¹⁾	S3	S4	Time	S5	S6	Unit	S7	DPB ²⁾	S8	Output
0	0	100%	0	0	50ms	0	0	Pa	0	on	0	0-10/4-20
1	0	75%	1	0	500ms	1	0	mbar	1	off	1	0-5/0-20
0	1	50%	0	1	2s	0	1	inch WC				
1	1	25%	1	1	4s	1	1	kPa				

1) Measuring range 2) Display backlight

Connection Diagram

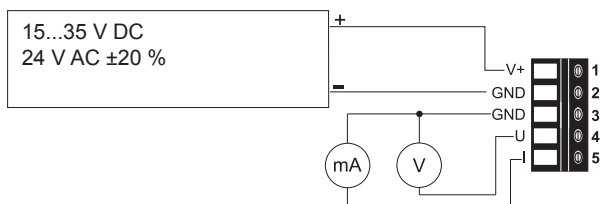

User Interface - LED Indication

Green LED

Flashing (1s interval) = EE600 operates normally, the measured data is within the selected measuring range

Off = No power supply or electronics failure

Red LED

Flashing (1s interval) = The measured data is out of the selected range (overload or reversed pressure connection)

INFORMATION

+43 7235 605 0 / info@epluse.com

E+E Elektronik Ges.m.b.H.
 Langwiesen 7 • A-4209 Engerwitzdorf
 Tel: +43 7235 605-0 • Fax: +43 7235 605-8
info@epluse.com • www.epluse.com

LG Linz Fn 165761 t • UID-Nr. ATU44043101
 Place of Jurisdiction: A-4020 Linz • DVR0962759

