

Rugged TROLL Quickstart Guide



Instrument & Required Accessories

1. Rugged TROLL instrument
2. One of the following communication solutions:
 - Direct-read cable and Wireless Rugged TROLL Com
 - Direct-read cable and USB Rugged TROLL Com (200 only)
 - Docking station
3. Bluetooth-enabled mobile device or Windows PC

Getting Started (3 Steps)

1 Connect the instrument to the communication device.

Connect Rugged TROLL to one of the three available communication devices (Wireless Rugged TROLL Com, Rugged TROLL Com or Docking Station).



Unscrew cap from instrument.



Unscrew cap from end of cable.



Attach cable to Rugged TROLL.



Connect cable to Wireless Rugged TROLL Com.

or



Line up instrument tab with docking station slot.



Insert Rugged TROLL in docking station



Plug docking station into your PC's USB port.

or

(Rugged TROLL 200 only)



Open Rugged TROLL Com's battery compartment door. Insert 9-volt battery.



Secure direct-read cable to TROLL Com.



Connect cable to instrument and plug into PC's USB port.

2 Connect to the software.

Option 1: Connect to the VuSitu mobile app (recommended)




Download the VuSitu mobile app from the Google Play Store at play.google.com.




Turn on the Wireless TROLL Com and open VuSitu mobile app. Select **Choose or Add a Device**.



Select **Add New Device** when connecting for the first time.

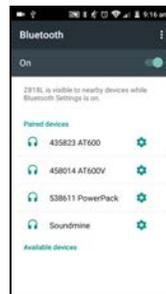

From device's Bluetooth Settings screen, tap serial number of instrument to connect.

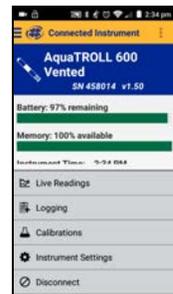


Tap mobile device's back button to view Connected Instrument screen.



VuSitu's on-screen instructions will guide you through instrument calibration, live readings, log setup and data sharing.


Option 2: Connect to Win-Situ on a PC via Bluetooth

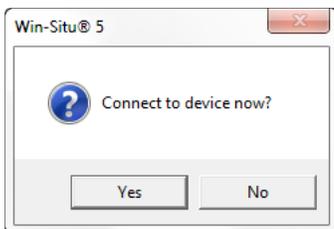

Open Win-Situ. Select **Yes** when asked to connect now.



Click **Add Bluetooth Device** button.

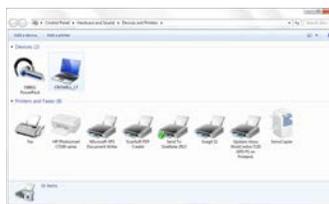

From Devices and Printers window, click **Add a device**.



Select your Wireless TROLL Com from the list of Bluetooth-enabled devices. Click **Next**.




Make sure device is highlighted in Select a Bluetooth Device window and click check mark button.



Click check mark button on Default Communication Settings window to close.




Click yellow connect button at bottom of screen.

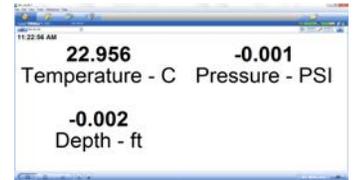


Your instrument is now connected to Win-Situ and you should see the Home screen.

Option 3: Connect to Win-Situ on a PC via USB TROLL Com or Docking Station

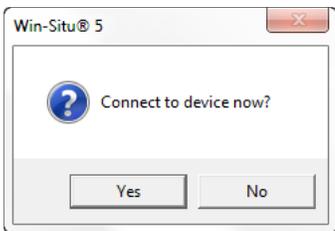


Open Win-Situ. Select **No** when asked *Connect to device now?*

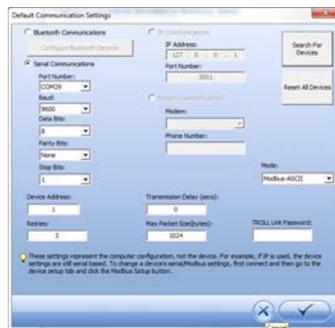

Choose Preferences > Com Settings from menu bar. Select Serial Communications radio button. Click **Search for Devices**.



Message will appear when device is found. Click **OK**.

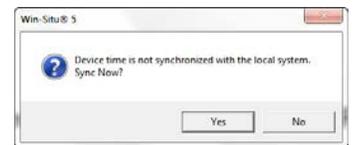

Click **Yes** when prompted to sync device time with local system.

3 Learn more.

Get complete instructions for your instrument and software in the product manual. Download it from www.in-situ.com.